


Data I/O Corporation

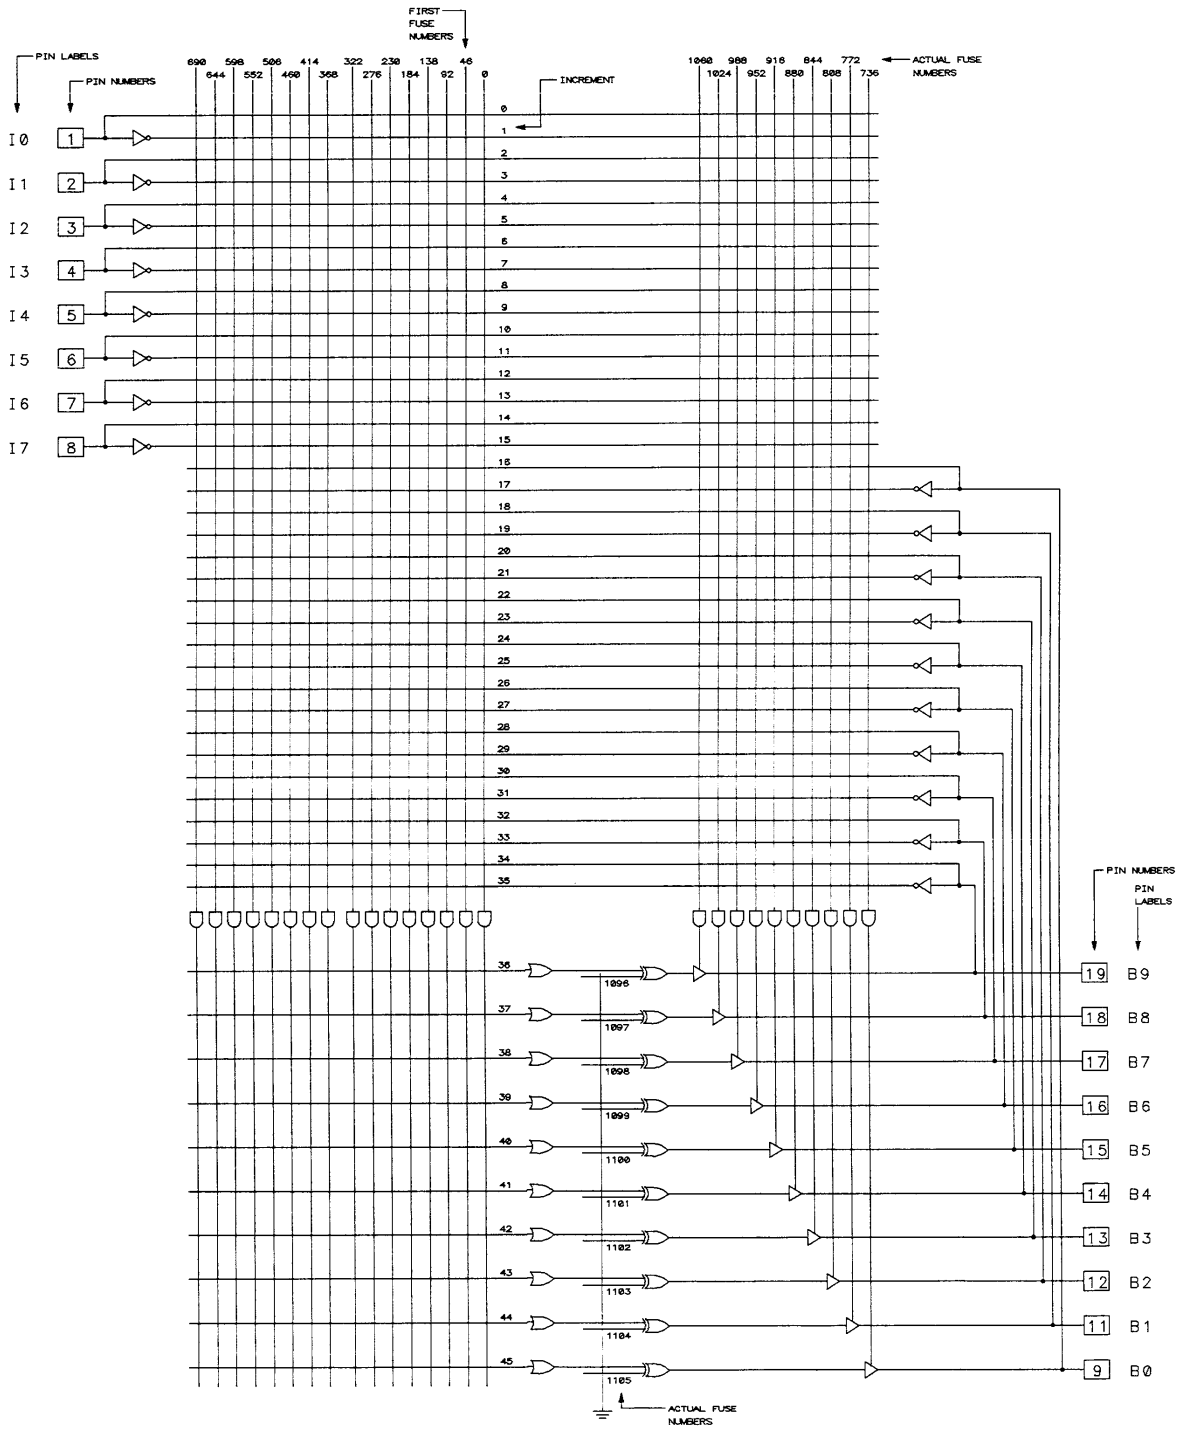

NOTE: FUSE NUMBER = FIRST FUSE NUMBER + INCREMENT